

Question: I have a backpack lock model #1547, 1549, 1551, 1555 and 1559 from Master Lock. How can I reset the combination on my backpack lock?

Here are the instructions on how to reset the combination on your backpack lock (which is pre-set at the factory to open to combination 0-0-0):

1. With dials at 0-0-0 (or combination the lock was previously set to), push in the shackle
2. With shackle pushed in, set your new combination
3. Release shackle and scramble wheels to lock
4. Be sure to record your NEW combination as you are the only one that knows it!

Answer:

Note: *The lock may only be reset when it is in the open position. If you do not recall the combination the lock is set to, you will not be able to reset the combination.*

Store your combination at www.masterlockvault.com - a FREE service from Master Lock! The Master Lock Vault provides a safe & convenient place to store all of your confidential data for quick & easy access from your PC, iPhone, or any other mobile devices!