## **Instructions:**

Opening the Select Access door.

- 1. Locate concealed preset combination positioned behind the product.
- 2. Open protective cover to reveal the dials.
- 3. Rotate the dials to the preset combination.
- 4. Press the release buttons located on the side of the product to open the door.
- 5. Guide the door down to fully open.
- 6. Add or remove keys and access cards.
- 7. Close compartment door.
- 8. Scramble combination dials to lock the door to conceal your combination (A).
- 9. Close the protective cover (B).

## To set a new combination:

The initial preset combination is concealed behind the product.

- 1. Open the compartment door (see instruction above).
- 2. Push the release lever right and up. The lever remains in this position.
- 3. Rotate dials to your desired combination.
- 4. Push the reset lever down and left, back to the original position.
- 5. Close the compartment door.
- 6. Scramble the combination dials to lock the door and conceal your combination (A).
- 7. Close the protective cover (B).

## To hang Select Access wall mount model

For added security, consider installing Select Access in a discrete location

You will need: pencil or marker, a cross-head screwdriver, level, drill and drill bit. For certain surfaces (masonry) anchors and a hammer are recommended.

- 1. Open the compartment door (see instruction above)
- 2. Position the metal mounting plate on the desired surface.
- 3. Use level to verify the plate is horizontal.
- 4. Mark the position of the screw holes on the surface.
- 5. Remove plate.
- 6. Drill holes.
- 7. If necessary use hammer to place anchors
- 8. Place metal mounting plate in Key Lock Box with mounting plate inside up to holes.
- 9. Insert and tighten screws.
- 10. Close compartment door.
- 11. Scramble the combination dials to lock the door and conceal your combination (A)
- 12. Close the protective cover.

## Reminder:

- (A) The release buttons will open the Select Access until you scramble the dials
- (B) Keep the protective cover closed to increase weather resistance and to conceal the dials from view.

Your Select Access should be securely mounted in a discreet location not visible from a public place and not visible from general observation.