

Resettable Combination Cable Lock

TO LOCK YOUR BIKE PROPERLY:

Place your bike against any secure fixed object with chaining facing out. Wrap the cable around the fixed object and pass it through one wheel, around bike frame, through the second wheel and back to the lock head. Note: you may need to remove your front wheel and place it by your rear wheel if cable is too short. Check the lock before leaving the bike to make sure it is secured.

EZ RESET – To set your own personal combination:

1. Unlock the lock using the factory set combination of “----“
2. Pull the cable out from the lock housing.
3. To free up the number dials, flip the small reset lever up 180° until it is flat against the lock head (Fig. A).
4. Turn the dials one at a time to set your personal 4-digit combination.
5. To set your numbers, flip the small reset lever down 180° until it is flat against the lock head (Fig. B). NOTE: Do not move the number dials when your flip the lever down.
6. Insert the cable back into the lock housing. Verify the combination to make certain that you have not inadvertently changed any of the numbers during the reset process.
7. Turn the dials to scramble the numbers in order to secure the lock.
8. You may want to write down your numbers in case you forget them.

TO UNLOCK:

1. Turn the dials to your personal 4-digit combination.
2. Pull the cable out from the lock housing.

TO LOCK:

1. Turn the dials to your personal 4-digit combination.
 2. Insert the cable back into the lock housing.
- Turn the dials to scramble the numbers in order to secure the lock.

